

IMPORTANT

Read all instructions before assembling.

WARNING: To avoid damages, assemble the product on a soft, clean surface.

CAUTION: Keep small parts out of reach of children.


Before assembly, remove all parts and part packages from carton. If anything is missing or damaged, please contact the retailer from which the product was purchased or contact customer service.



MI11060 Los Olivos Wall Mirror

PACKAGE CONTENTS

Parts		Quantity
A	MIRROR	1
B	METAL BAR	1
C	WALL ANCHOR (not supplied)	3
D	WALL SCREW (not supplied)	3

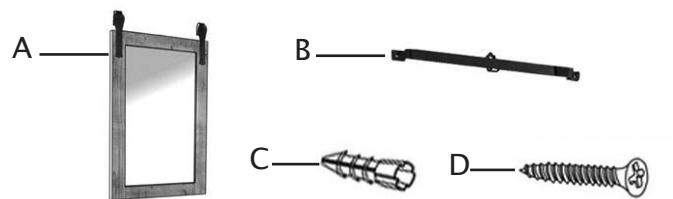

ASSEMBLY

1. Determine desired place to hang mirror.
IMPORTANT: If metal bar (B) will not be installed into wall studs, wall anchors (C) (not supplied) must be used.
2. Place metal bar (B) on wall at desired hanging height. Mark with a pencil on wall the location of three holes in metal bar (B). Place metal bar (B) aside.
3. Using a drill bit the size of wall anchor (C) (not supplied), drill a hole at each marked location.
4. Carefully tap one wall anchor (C) into each hole in wall. Top of wall anchor (C) should be flush with wall.
5. Place metal bar (B) on wall. Align holes in metal bar (B) with wall anchors (C).
6. Thread one wall screw (D) (not supplied) into each hole in metal bar (B) and into wall anchors (C). Tighten wall screws (D) to secure metal bar (B) to wall.
7. Carefully hang mirror (A) onto metal bar (B). Ensure mirror (A) is securely hanging on metal bar (B).

