



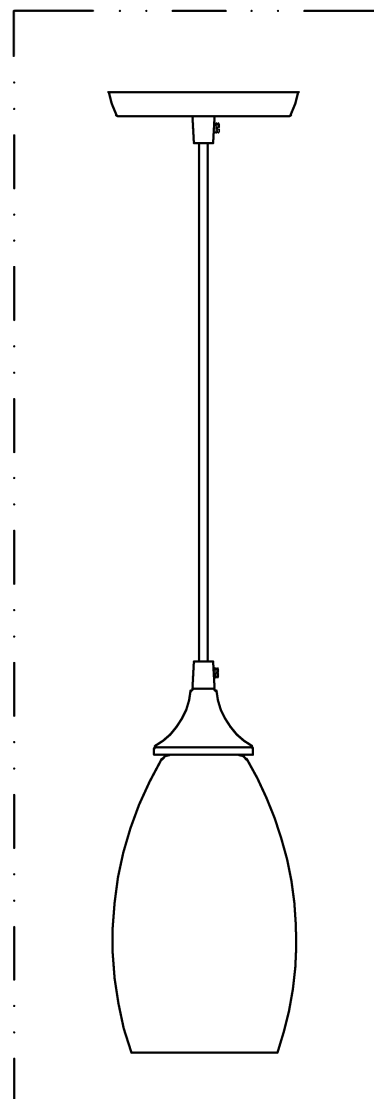

ITEM#: CL11718

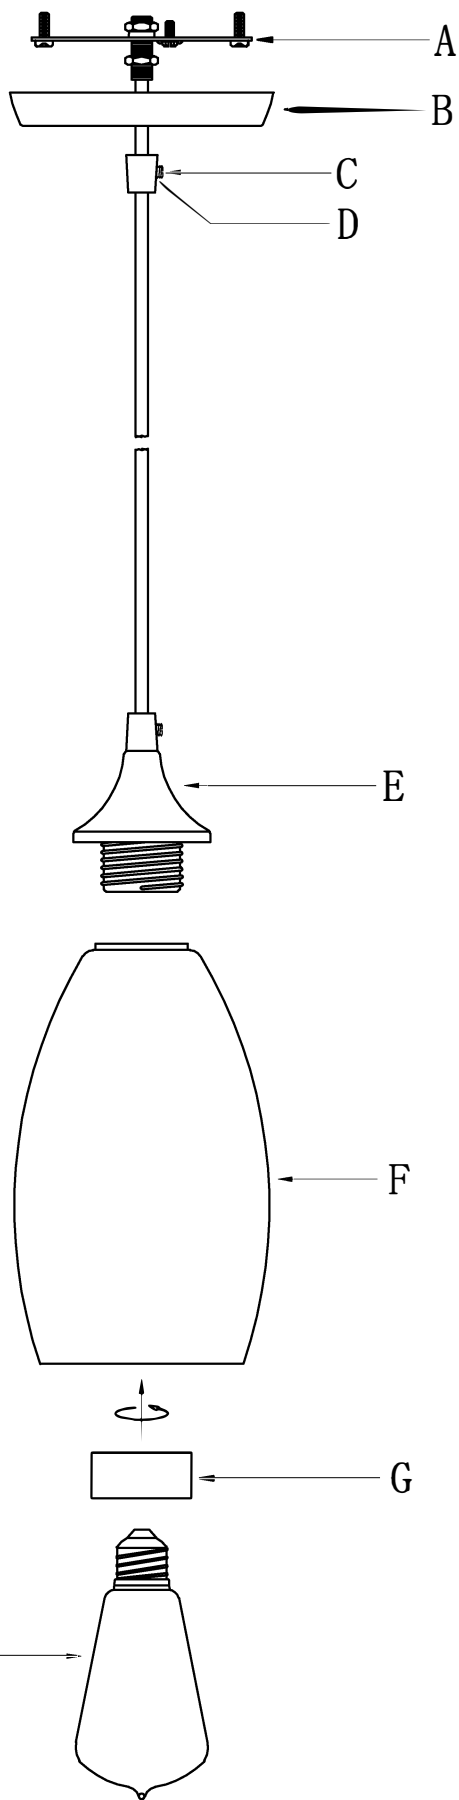

MOUNTING AND WIRING INSTRUCTIONS

1. Fasten mounting strap to junction box with machine screws found in junction box. The mounting strap must be used to provide proper grounding of fixture.

2. Turn nipple into threaded hold in the mounting strap. Turn hex nut onto nipple. Remove knurled nut from hanger loop. Turn hanger loop onto nipple. Place canopy up against ceiling and adjust nipple to leave about 3/8" protruding through canopy and tightly lock nipple in place by turning hex nut up against mounting strap.

3. Assemble one end of chain to fixture loop by opening chain link and closing it around loop. NOTE: Never twist chain link to open. Chain link must be opened in a "C" shape.

4. Weave the two conductor cord and bare ground wire through the chain about every third link. Slide knurled nut down chain. Slide canopy down chain.

5. Adjust chain length and wire lead length at this time for desired hanging height of fixture. Lead at least 12" of leads beyond end of chain.

6. Open last chain link then lift chain and fixture up to ceiling and hook open link through hanger loop. Close chain link.

Insert wire leads through hole in hanger loop and nipple into junction box. Pull leads down out of junction box for easier wiring. Connect the UNIDENTIFIED lead (white, tinned or

ribbed if both conductors are the same color, feel for the ribbed edge that runs the entire length of one side) to the WHITE house wire. Connect the UNIDENTIFIED lead to the BLACK house wire. Turn the green ground screw into the hole in the mounting strap and wrap the bare ground wire around screw one full turn and tighten screw. Connect remaining end of bare wire to the house ground wire (bare). If the junction box itself is metal and is already grounded, attachment to the green screw only is sufficient. Always use wire connector that are UL approved for the size and number of wires to be connected.

Caution: Never connect the bare ground wire to the black or white house wires.

8. Place all wires and connectors back into the junction box making sure there are no loose wire connectors or bare leads. Slide canopy up to ceiling and hold in place by turning knurled nut onto hanger loop.

9. (For fixtures with glass shades only) Your glass shade is held in place either by thumbscrews or by a spin-on ring screwed onto a threaded socket. Place glass shade(s) into holder and tighten thumbscrews or spin ring onto socket.

10. Lamp fixture with proper size bulbs in accordance with the wattage label found on the fixture.

